

Smoothie maker

Please read the instructions carefully and familiarize yourself with the special function of the device before using it in operation!



Push the safety-button!




Switching off

To turn off, simply tilt down the cup with the motor unit.

WARNING!

Before tilting down the cup/motor press the safety button to unlock! Do not apply excessive force to avoid any damage.

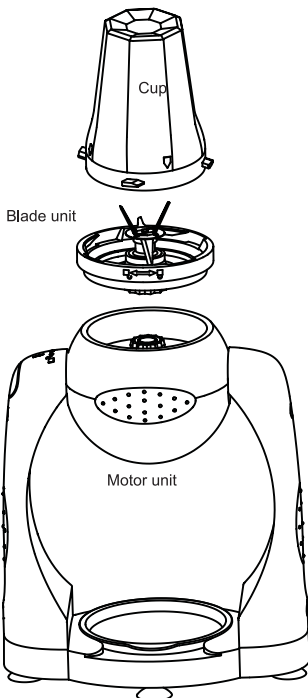

Cup fixation and cleaning!

WARNING!

Never insert or remove the blade-unit when the device is connected!

Please note that the cup and the blade-unit can be removed only in certain positions. Due to the safety feature of the SmoothieMaker the engine runs only when cup and blade-unit are inserted.

Motor unit in down-position:

Cups can be inserted or removed

Motor unit in up-position:

Operation with inserted cup. The cup is fixed and can not be removed.

Motor unit in up-position (without cup):

The blade unit can be removed for thorough cleaning and replaced afterwards.